


SB11WE

- A. Attach the three swivel casters onto the base using the lock washers, flat washers, and bolts provided (see Fig. #1).
- B. Thread upright tube assembly (3) securely into the base (2). Use care to thread the tube perpendicular to the base to avoid stripping the threads.
- C. Thread swivel assembly (4) onto the top of the upright tube assembly.
- D. Place the straight boom tube (5), that contains the counterweight, through the swivel assembly. Next, thread the straight boom tube into the flared female end of the remaining boom tube (6).
- E. Tighten all hardware and tubes securely.
- F. Attach desired microphone to threaded, angled end of the boom.

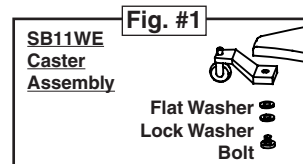

Specifications are subject to change without notice



AtlasSound.com